

Replacement Cover Measurements

Length Measurement (L)

- * Measure Length of Base Rail

Perimeter Measurement (P)


- * Measure from the ground - over the arch - back to the ground.

Width measurement (W)

- * Measure outside to outside of the frame

Purling Height

- * Measure from ground to top of first side Purling

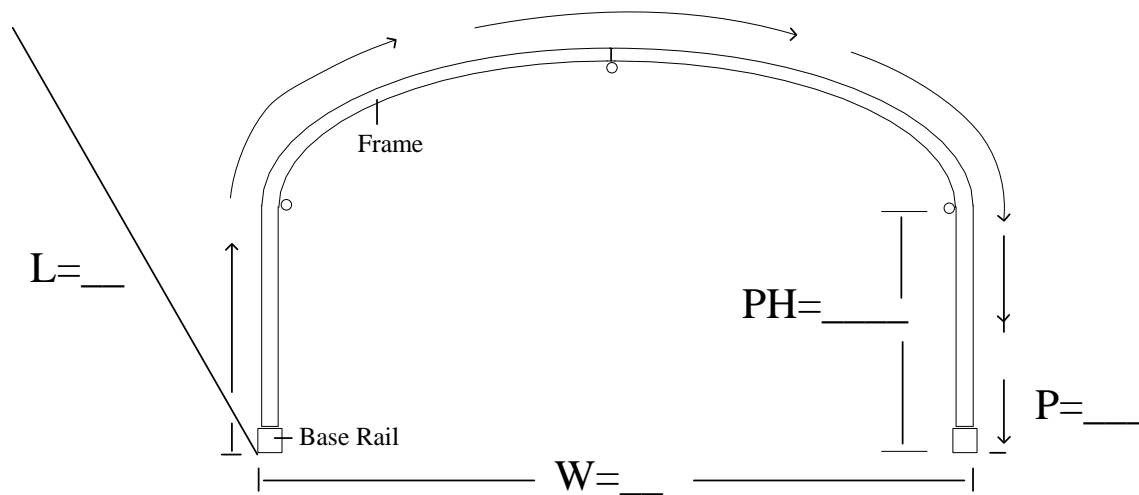

Front View